

## Lightbox Assembly Instructions

Figure 1 shows the parts referenced in this sheet

These instructions apply to products :

AP-A-B-00XX Single sided lightboxes, AP-A-B-01XX Double sided lightboxes

### 1. **Remove End Panel**

Use a 4mm Allen key to remove the four screws from the **top and bottom** of the end marked **"Remove this end for installation or maintenance"**.

### 2. **Remove Acrylic Face**

Carefully slide back the acrylic face panel. Remove masking from acrylic panel if it is present. Apply your own graphics to the face of the Acrylic.

### 3. **Unpack (double sided variant only)**

Remove the droppers from inside the lightbox and take them out of their packaging. Remove the drilling template. Unscrew the mounting plate from each dropper assembly.

### 4. **Install Threaded Rod (double sided variant only)**

Insert the threaded rod through the earth connection and through the hole in the top of the lightbox housing. On the inside of the lightbox, fit and tighten the locknut onto the threaded rod.

### 5. **Attach Dropper (double sided variant only)**

Slide the dropper spacer and dropper tube onto the threaded rod on the outside of the lightbox. Attach the mounting plate back onto the dropper assembly.

### 6. **Repeat for Second Dropper (double sided variant only)**

Repeat steps 4–6 for the other dropper.

### 7. **Reinstall Parts**

Slide the acrylic face panel back into position. Screw the end cap back on.

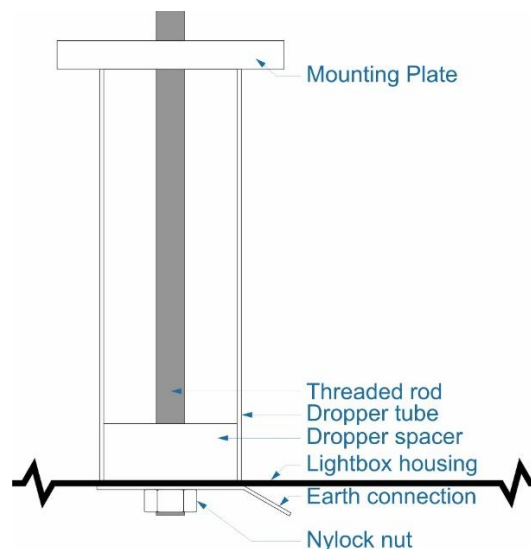


Figure 1: Showing the dropper parts referenced in the document